

Texas TeleSys, Inc.

Your Telecom Solution! 512.468.8392

Programming System Speed Dials

To enter a programming session, follow the next few simple steps:

1) Press FEATURE * * 2 6 6 3 4 4

2) Enter Password: 2 6 6 3 4 4

Display will read: "**Terminals & Sets**"

Using the navigation keys, as displayed below, follow the next simple steps:



3) Press: *NEXT*

Display will read: "**Lines**"

4) Press: *Next*

Display will read: "**Services**"

5) Press: *Next*

Display will read: "**System Speed Dial**"

7) Press: *Show*

Display will read: "**Speed dial #:__**"

Hint: Begin your System Speed Dials with "**01**"

Enter 01 or 02 or 03 etc.

Display will read: System Speed Dial #: **01**

8) Press: *Show*

Display will read: "**No number stored**"

9) Press the **"CHANGE"** softkey.

Display will read: **"#01:"**

10) Enter the Speed Dial number

Press the **"OK"** softkey.

11) Press: *NEXT*

Display will read: **"Use prime line"**

12) Press: *NEXT*

Display will read: **"Display digits:Y"**

13) Press: *NEXT*

Display will read: **"Bypass restr'n:N"**

14) Press: *NEXT*

Speed dial 01 has now been programmed:

To program another Speed Dial Number, repeat steps 6 thru 14.

[Congratulations! You now have learned to program Speed Dials!](#)