

Texas TeleSys, Inc.

Your Telecom Solution!

512.468.8392

Viewing the NAM serial number (System ID)

To view the serial number:

```
Password:
RETRY
```

```
ACCESS Server
BACK    NEXT    ADMIN
```

```
A. Prt queue mgr
QUIT    NEXT    SHOW
```

```
I. Serial Number
QUIT    NEXT    SHOW
```

```
S#: XXXXXXXXXXXX
OK
```

- 1 Press *Feature 915*
If 915 doesn't work try 916 thru 925
- 2 Enter the default password 2223772 = *ACCESS2*
- 3 Press ADMIN
- 4 Press NEXT until the display shows:
- 5 Press SHOW.
- 6 Press OK.
Write down this number
- 7 Press RIs to end this session