

Texas TeleSys, Inc.

Your Telecom Solution! 512.468.8392

Activating / Deactivating Set Relocation

To enter a programming session, follow the next few simple steps:

1) Press FEATURE * * 2 6 6 3 4 4

2) Enter Password: 2 6 6 3 4 4

Display will read: "**Terminals & Sets**"

Using the navigation keys, as displayed below, follow the next simple steps:



3) Press: **NEXT** until the display reads: "**System Programming**"

4) Press: **SHOW**

Display will read: "**Hunt Groups**" or "**Change DN's**"

5) Press: **NEXT** until the display reads: "**Featr settings**"

6) Press: **SHOW**

Display will read: "**Backgrnd music**"

7) Press: **NEXT** until the display reads: "**Set relocation**"

8) Press the **CHANGE** softkey to toggle the setting to Yes or No

9) Press: **RLS**

Congratulations! You have successfully changed your Set Relocation setting